

Product:
MPD Series

Title:
Safety Installation and User Guide



Document Number:
81408-4

Issue:
4

Date:
16/December/2025

Change History

ISSUE	DATE	NAME	SECTION	CHANGE
1	19/Jan/2021		All	Created from 81408-1
2	05/Mar/2021	JS	1 8.2	Updated different cable length ordering Updated approval wording
3	13/Apr/2023	JS	All All 7.1.3 8.3 9.1 9.2.1 10.5 10.5.2	Updated doc template Added MPD1 model (1kV) Protection chapter added Unit grounding paragraph added. Point 7 added. Unit can be operated in any orientation. Cooling airflow recommended Corrected from analog ground to signal ground Changed term from “slaves” to “units” Clarified RS-485 connection instructions
4	16/Dec/2025	JS/BR	1-6 3.3 10.5 10 Appendix B	Added in sections to adhere to updated safety information. Adding MPD1 weight Voltage control resolution table added Added sections on enable, wobbler and slew rate Windows 11 compatibility added Windows registry access requirement removed Enable operation info corrected

Contents

1.	Safety Information	4
2.	Reasonable Use and Responsibility	5
3.	Electrostatic Sensitivity	6
4.	Hazardous Substances	6
5.	Electromagnetic Compatibility (EMC)	6
6.	Cleaning	6
7.	Unit Description.....	7
7.1	Unit Ratings	8
7.1.1	Power Input.....	8
7.1.2	HV Output	8
7.1.3	Protection.....	8
7.2	Environmental conditions.....	8
8.	Safety	9
8.1	Meaning of Symbols	9
8.2	Applicable standards	10
8.3	Unit Grounding.....	10
9.	Installing the Unit.....	11
9.1	Electrical Installation	11

9.2	Connections	11
9.2.1	Power input and unit control	11
9.2.2	HV Outputs	12
9.3	Mechanical Installation	12
10.	Operating the Unit	13
10.1	Enable Control	13
10.2	Analogue Control	13
4.1.1	Control and Monitoring Signals	13
10.2.1	Remote DAC Control	14
10.2.2	Local DAC Control	15
10.2.3	External potentiometer control.....	16
10.3	Digital Control	17
10.3.1	RS232 Connection	18
10.3.2	RS485 Connection	19
Appendix A -	Mechanical layout	20
	Units rated from 1kV to 10kV.....	20
	Units rated at 15kV and 20kV	21
	Units rated at 30 kV	22
Appendix B –	Graphical User Interface (GUI)	23
	GUI Requirements and limitations.....	23
	GUI Installation instructions.....	23
	First time installation	24
	Installing GUI Updates	25
	Uninstall using the Windows 10 ‘Apps & Features’ tool.	26
	GUI Configuration and Operation.....	27
	GUI Configuration	27
	Opening comms with the MPD unit	28
	Monitoring the MPD Unit.....	28
	Programming Output Demand	29
	Controlling multiple MPD units (RS-485 mode only).....	30

1. Safety Information

Ensure you read this guide carefully and familiarise yourself with the unit before carrying out installation, maintenance or servicing activities.

This guide is subject to change without notice. Whilst every effort has been made to ensure the accuracy and completeness of information, Spellman High Voltage Electronics Limited shall not be held liable for errors and omissions herein.

DANGER

HAZARD OF ELECTRIC SHOCK

This power supply must always be connected to the Protective Earth Ground.

Do not touch or approach connections unless the equipment is turned off and the capacitance of both the load and power supply have been discharged by either:

- Allowing adequate time for the discharge of internal capacitance of the power supply.
- Using a properly rated discharge rod to ground the terminals.

Do not ground yourself or work under wet or damp conditions.

Always return to an authorised supplier for servicing.

Servicing and maintenance should only be performed by competent personnel with sufficient training, experience and knowledge working with high voltage equipment.

Extreme caution must be exercised when undertaking maintenance when the power supply cover is removed.

Any interlocks provided are solely for use as functional interlocks, and as such must not be used under any circumstances as a means of providing operator protection.

Failure to follow these instructions will result in death or serious injury.

⚠ DANGER**DANGER D'ELECTROCUTION**

Cette alimentation doit toujours être connectée à la terre de protection.

Ne pas toucher ou s'approcher des connexions à moins que l'alimentation et l'équipement haute tension connecté soit éteint et que la charge résiduelle dans l'alimentation et l'équipement haute tension ont été déchargé par:

- Suffisamment de temps pour la permettre la décharge interne de l'alimentation.
- Une tige de décharge appropriée pour mettre les bornes à la terre.

Ne vous connectez pas à la terre et ne travaillez pas dans des conditions mouillées ou humides.

Retournez toujours à un fournisseur agréé pour l'entretien.

Tous les verrouillages fournis sont uniquement destinés à être utilisés comme verrouillages fonctionnels et, en tant que tels, ne doivent en aucun cas être utilisés comme moyen de protection de l'opérateur.

L'entretien et la maintenance ne doivent être effectués que par du personnel compétent ayant une formation, expérience et des connaissances suffisantes pour travailler avec des équipements haute tension.

Une extrême prudence doit être exercée lors de la maintenance et lorsque le couvercle de l'alimentation est retiré.

Le non-respect de ces instructions entraînera la mort ou des blessures graves.

2. Reasonable Use and Responsibility

This power supply must only be used in compliance with applicable safety regulations and standards, its specified requirements, and all technical documentation provided.

This power supply is a component part intended to be incorporated into equipment, or machinery. It is the overall equipment manufacturer's responsibility to ensure compliance of their equipment to applicable regulations and standards.

Prior to the installation of this high voltage power supply, a risk assessment should be undertaken of how it is being incorporated into the overall equipment. Any risks identified must be addressed during the installation process.

Only operate the power supply with the specified connectors, cables and accessories. Always use genuine parts and accessories.

MPD Series – Installation and User Guide	Document Number: 81408-4	Issue: 4
Spellman High Voltage Electronics Limited +44 (0)1798 877000 hvsales@spellmanhv.co.uk Broomers Park, Pulborough, W. Sussex, UK. RH20 2RY		

3. Electrostatic Sensitivity



Caution: This unit is not particularly susceptible to electrostatic discharge damage when the covers are in place, nevertheless it is good practice to avoid directly touching connector terminals, especially in a low humidity environment.

4. Hazardous Substances

This module complies to European /United Kingdom Restriction of Hazardous Substances (RoHS) (using exemptions) and the Restriction, Evaluation, Authorization and Restriction of Chemicals (REACH) legislation.

Californian Proposition 65



WARNING: This product can expose you to chemicals including lead and lead compounds which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to: <http://www.P65Warnings.ca.gov>

Spellman High Voltage Electronics power supplies are specialist industrial components and are not intended to be used by consumers. Within the state of California, occupational exposure may occur if employees handle the module at their place of employment. Because Spellman High Voltage Electronics does not control how our products are used in an occupational environment, it is the responsibility of the employer to make available any necessary Proposition 65 warnings to their employees.

5. Electromagnetic Compatibility (EMC)

This power supply is a component designed to be incorporated as a part of an overall piece of equipment. The EMC characteristic of the end equipment in which it is installed, will be influenced by all the component parts and system design. When installing this unit, please ensure good EMC practice is followed. The protective earth ground point used for safety will also act as a functional ground for EMC purposes.

6. Cleaning



WARNING: Do not clean.

This module is designed to be built into finished equipment and as such, its case does not provide any protection from fluids. Never use any form of cleaning fluid or spray, either directly or close to the module. Always ensure that it is protected from fluids once incorporated into the finished equipment.


7. Unit Description

The MPD range of high voltage 1kV to 30kV dc-dc converters produce a high-performance dc output for a wide range of instrumentation and analytical applications. The combination of linear and switch mode power conversion techniques provides low noise and high efficiency. The unit also offers excellent ripple levels and stability.

The units are designed for operation from a 24V dc input and will supply up to 10W of output power. The signal and power inputs and outputs are via a 15 way male 'D' connector.

The HV output is via a 1m long un-terminated HRG58 screened cable, other lengths up to 5m can be requested, please consult with factory.

The part number for a given unit describes its characteristics:

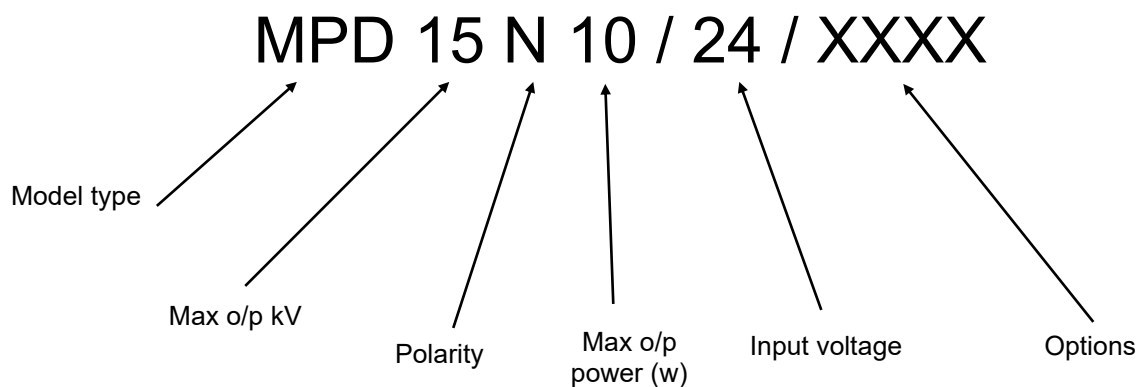

7.1 Unit Ratings

7.1.1 Power Input

The input rating for all units is 24Vdc $\pm$ 2V, 1A

7.1.2 HV Output

The units provide the following rated HV outputs:

Unit	Voltage	Current
MPD1P10/24	+1kV	10mA
MPD1N10/24	-1kV	10mA
MPD2.5P10/24	+2.5kV	4mA
MPD2.5N10/24	-2.5kV	4mA
MPD5P10/24	+5kV	2mA
MPD5N10/24	-5kV	2mA
MPD10P10/24	+10kV	1mA
MPD10N10/24	-10kV	1mA
MPD15P10/24	+15kV	0.67mA
MPD15N10/24	-15kV	0.67mA
MPD20P10/24	+20kV	0.50mA
MPD20N10/24	-20kV	0.50mA
MPD30P10/24	+30kV	0.33mA
MPD30N10/24	-30kV	0.33mA

7.1.3 Protection

Arc and short circuit protected. Not designed to withstand continuous arcing.

The unit monitors and reports faults through status flags (digital com).

When a trip occurs, the output is disabled and the unit can be reset through enable, fault reset or power cycle.

7.2 Environmental conditions

The operating temperature range is 0°C to +50°C.

Relative humidity rating (RH)% is 20% to 85% (non-condensing).

Altitude 0 to 2000m above mean sea level

8. Safety

The HV outputs of the units are hazardous and the conditions of this manual must be complied with to maintain safety. The unit is contained in an earthed case with a screened HV output cable and the HV output cable must be terminated safely before the unit is operated. This unit must be sourced with a UL recognised double insulated or SELV 24 V dc supply.

The unit shall be properly bonded to the main protective earthing termination in the end product.

The unit has been evaluated for use in a Pollution Degree 2, Installation Category II environment.


Consideration should be given to conducting the following tests with the unit installed in the end product:

- Permissible Limits Tests with the unit installed in the end product.
- Temperatures on any accessible surfaces.

The case performs the function of heat sink and can exceed 60°C, therefore access to the unit shall be prevented during operation.

The protection against electric shock provided by the unit may be impaired if the unit is not operated in accordance with the instructions in this manual.

8.1 Meaning of Symbols

SYMBOL	MEANING
	Refer to manual before operating
	Caution, possibility of electric shock
	Protective conductor terminal (PE)
	Functional Earth
	Caution, hot surface
	Unit input rating
	Unit output rating

8.2 Applicable standards

The unit is designed to meet the requirements of EN 61010-1, UL 61010-1 and CAN/CSA-22.2 No. 61010-1. Please consult the factory for further approval information.

8.3 Unit Grounding

The unit is contained in an earthed case. The case of the unit shall be properly bonded to the main protective earth termination in the end product.

9. Installing the Unit

9.1 Electrical Installation

The unit is designed for indoor use and is to be supplied from a double insulated or SELV UL recognised, 24V dc supply.

1. The unit shall be properly bonded to the main protective earthing termination in the end product.
2. The unit should only be used in a Pollution Degree 2 Installation Category II environment.
3. Consideration should be given to conduct the following tests with the power supply installed in the end product:
 - a. Dielectric withstand test, between live parts of the power supply and the end product chassis.
 - b. Permissible Limits Test with the power supply installed in the end product.
4. The input and output connectors are not intended for field connections and should only be connected to internal wiring in the end use equipment.
5. The unit is intended for use as a component and no surface of the unit should be accessible in the end product.
6. All external circuits connected to High Voltage outputs shall be Double/Reinforced insulated from any accessible parts.
7. The unit is contained in an enclosed case and can be mounted in any orientation. A cooling air flow is recommended.

9.2 Connections

9.2.1 Power input and unit control

The power input and both analogue and digital communication are via a 9 way male 'D' connector. See table below for pin out details.

pin	Signal	I/O	Description
1	Power Ground	-	Ground
2	+24Vdc Input	I	+24Vdc @ 1 amp maximum
3	Voltage Monitor Output	O	0 to 10 Vdc equals 0 to 100% of rated output, Zout = 10kΩ
4	Voltage reference output	O	10V
5	Voltage Program Input	I	0 to 10 Vdc equals 0 to 100% of rated output, Zin = 10MΩ
6	Voltage Program Differential Amplifier Output	O	0 to 10 Vdc equals 0 to 100% of rated output, Zout = 10kΩ
7	Voltage Prog. Differential Amplifier Input - Positive	I	0 to 10 Vdc differential between pin 7 and pin 9 equals 0 to 100% of rated output, diode clamped to ground, Zin = 38kΩ
8	Current Monitor Output	O	0 to 10 Vdc equals 0 to 100% of rated output, Zout = 10kΩ
9	Voltage Prog. Differential Amplifier Input - Negative	I	0 to 10 Vdc differential between pin 7 and pin 9 equals 0 to 100% of rated output, diode clamped to ground, Zin = 38kΩ
10	Voltage Program Digital Output	O	0 to 10 Vdc equals 0 to 100% of rated output, Zout = 10kΩ
11	Signal ground	-	Signal ground for control and monitoring
12	Enable Input	I	Low = Enable. TTL, CMOS and open collector compliant
13	Digital Mode	I	RS232 or RS485 configuration
14	RS232 TxD/ RS485-	I/O	Low = RS485
15	RS232 RxD/ RS485+	I/O	Open circuit = RS232

9.2.2 HV Outputs

Captive 39.4" (1 meter) long un-terminated shielded HV cable:

1kV to 20kV units: HRG58

30kV units: LEMO 130666

9.3 Mechanical Installation

The units are only to be used in a pollution degree 2 (PD 2) environment.

The physical outline of the units is shown in Appendix A - Mechanical layout.

Fixings:

Three M3 x 0.5 blind inserts, maximum thread depth 5mm.

Note: Failure to comply with the above could compromise the safe operation of the unit and invalidate the warranty

Unit weight:

1kV to 10kV units 420g

15kV and 20kV units 650g

30kV units 950g

Mechanical Dimensions - see drawing in Appendix A - Mechanical layout.

10. Operating the Unit

The units are operated by either analogue input, using any of the methods detailed below, or by digital control using an RS232/485 serial port with a PC connection and a suitable interface.

10.1 Enable Control

The HV output of the MPD unit is enabled or disabled based on the most recent change to the enable signal, regardless of whether it originates from the analogue (HW) or digital (SW) input. The unit always responds to the latest signal change. The HW enabled requires a signal as defined in the table 1 in Section 3.2. To SW enable the output through the GUI, check/tick the check box; a short time afterwards, the indicator to the right of the check box will change colour. (See below.)

Enabled
Disabled

SW Enabled ☒ 
SW Enabled ☐ ☐

10.2 Wobbler Control – available only through digital control

Wobbler function: sine wave superimposed to voltage output (programmable amplitude 0-300V, period 0.1 to 2s) - see communication protocol document (48113-21) for further information.

10.3 Slew rate

The units will reach to >90% of voltage demand within 100ms when no capacitive load is connected to the HV output.

10.4 Analogue Control

10.4.1 Control and Monitoring Signals

The units are controlled and monitored using the following analogue signals.

PARAMETER	Description
Voltage control	0 to 10V for 0 to Full scale output V Accuracy $\pm 1\%$ $Z_{in}=10M\Omega$ Note: a stable, low noise reference source is recommended to achieve full unit performance.
Voltage reference output	10V (wrt signal ground) @ 10mA maximum Accuracy = $\pm 5mV$ Temperature Coefficient = 10ppm/ $^{\circ}C$
Enable	Active low enable, input impedance 10 k Ω Designed to be operated by TTL or CMOS logic or open collector transistor.
Voltage monitor	0 to 10V for 0 to full scale output (wrt signal ground) Accuracy $\pm 1\%$
Current monitor	0-10V for 0 to full scale output (wrt signal ground) Accuracy $\pm 1\%$

The following sections describe the various connections that can be used to control the MPD HV units.

10.4.2 Remote DAC Control

The differential input allows the voltage programming circuit to be remote from the power supply. It prevents voltage drops in the ground connection from affecting the programming signal. However, if there are voltage drops in the ground connection, the DAC should be provided with its own reference.

24V Power input on Pin 2.

Power Common on Pin 1.

0 to 10V voltage control signal to Pin 7.


Signal ground reference for 0 to 10V control signal. Connected to signal ground for 0 to 10V voltage control, also connected to Pin 9 and Pin 11.

Link Pin 5 to Pin 6.

Connect Enable Pin 12 to ground to enable HV output.

Voltage monitor output is on Pin 3.

Current monitor output is on Pin 8.

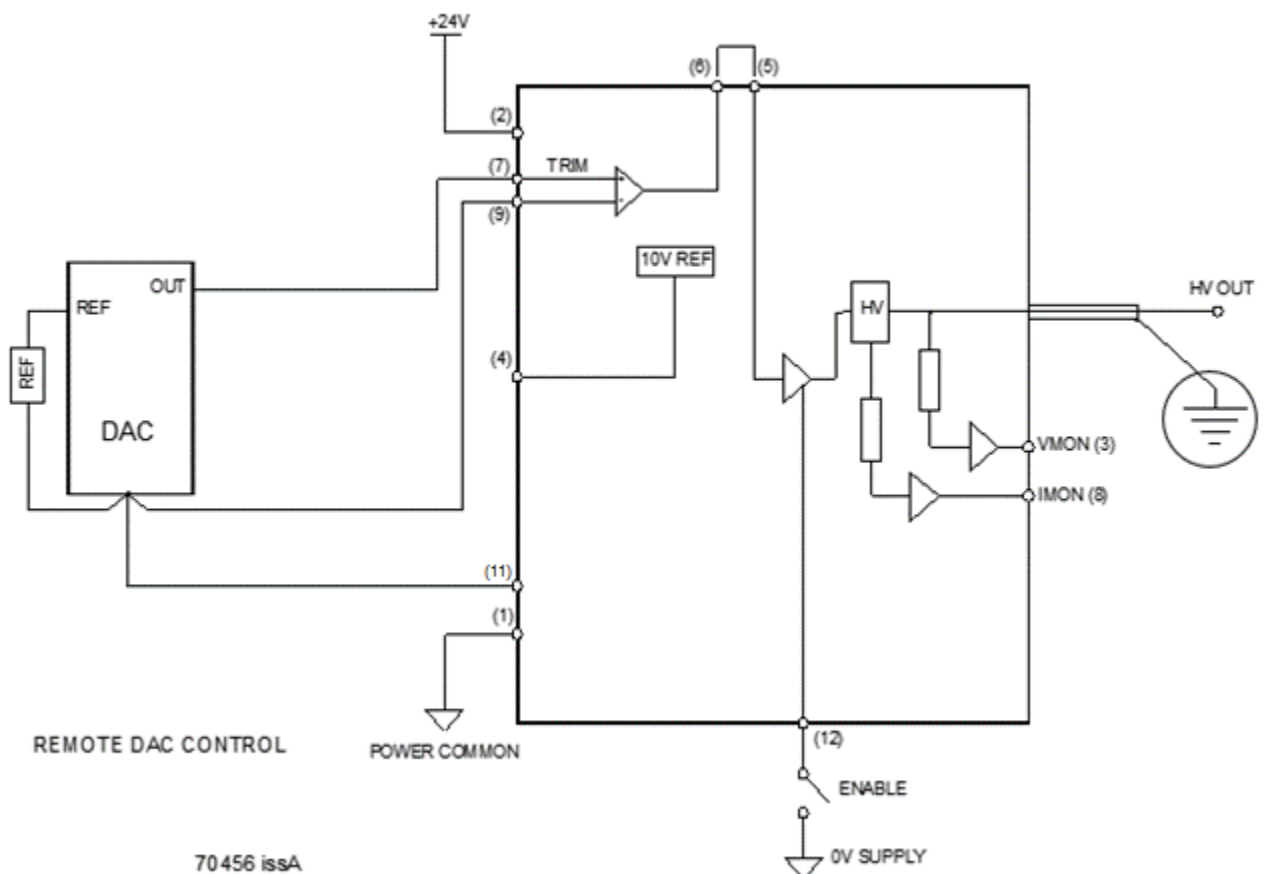

10.4.3 Local DAC Control

It is not necessary to use the differential input when the voltage control circuit is close to the power supply, however it is important to connect all grounds at Pin 1 of the PSU to prevent voltage drops in the ground circuit from affecting the programming signal. Take care to avoid ground loops.

24V Power input on Pin 2.

Power Common on Pin 1.

DAC output to Pin 5.


DAC ground to Pin 11.

Connect Pin 4 to the DAC reference input.

Connect Enable Pin 12 to ground to enable HV output.

Voltage monitor output is on Pin 3.

Current monitor output is on Pin 8.

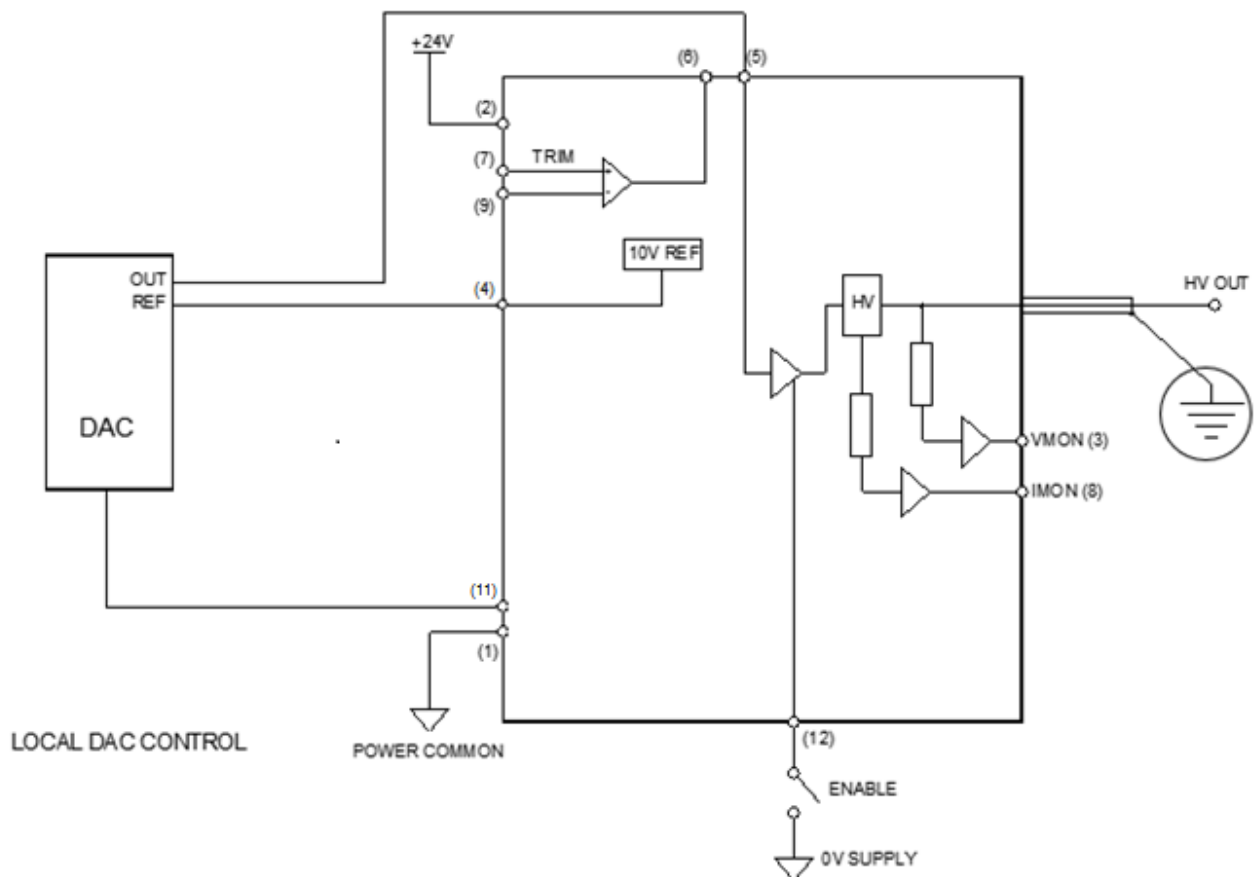

10.4.4 External potentiometer control

An external potentiometer can be connected between the 10V reference on Pin 4 and ground with the wiper connected to Pin 5, this will allow the potentiometer to be used to control the unit. The user should note the use of a potentiometer may affect the performance of the MPD unit.

The unit may be controlled by an external potentiometer as follows: -

24V Power input on Pin 2.

Power Common on Pin 1.

Connect Pin 4 to external pot CW.


Connect Pin 11 to external pot CCW.

Connect Pin 5 to external pot wiper.

Connect Enable Pin 12 to ground to enable HV output.

Voltage monitor output is on Pin 3.

Current monitor output is on Pin 8.

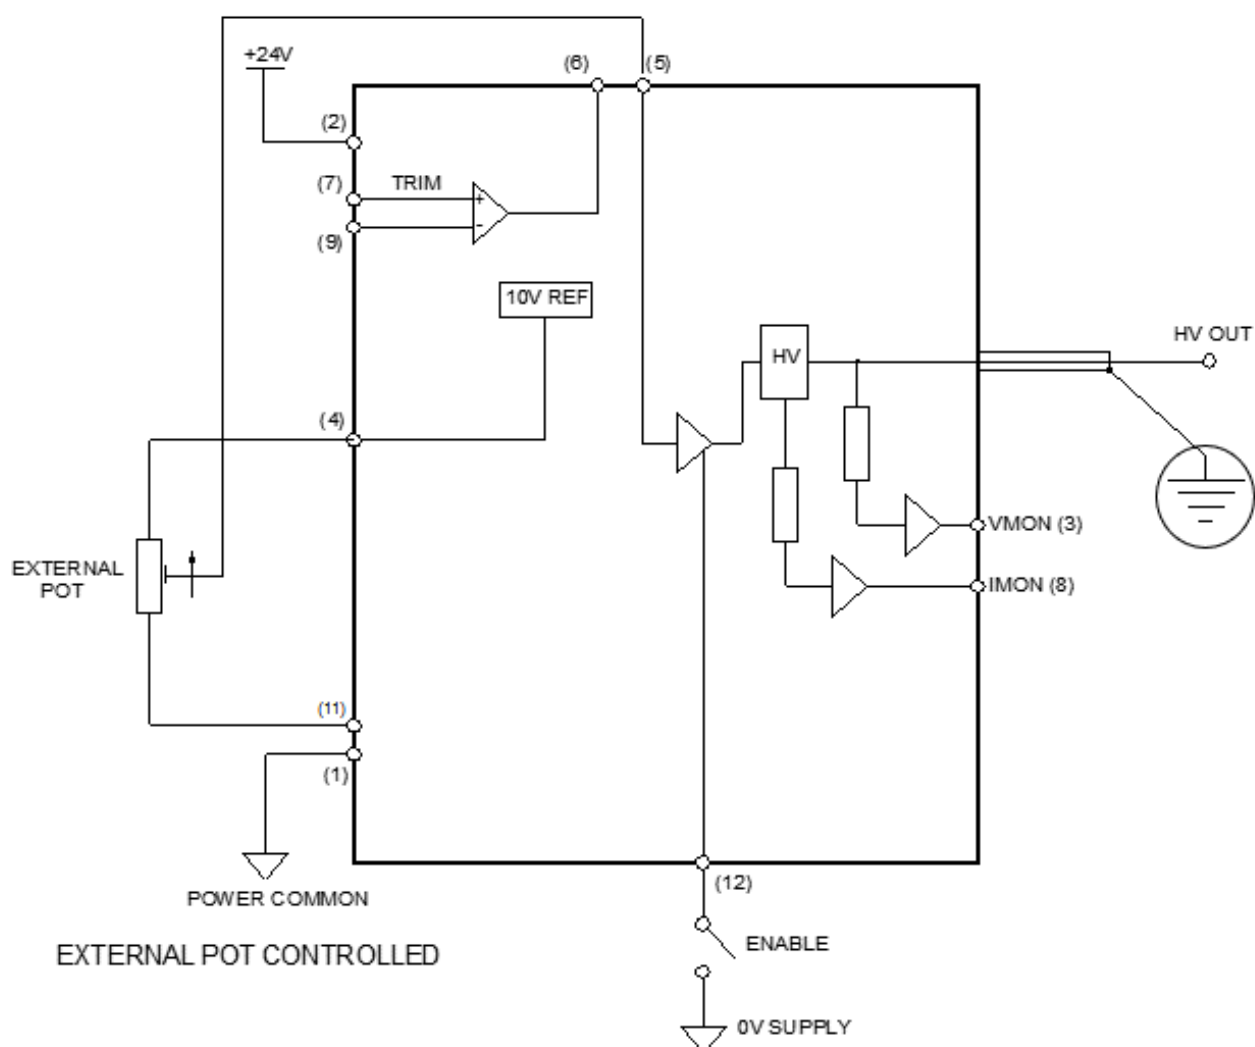

10.5 Digital Control

The units operate with a simple ASCII protocol see document number 48113-21 which covers systems with both single and multiple units. The following parameters apply.

PARAMETER	MIN.	VALUE	MAX.	UNITS
Digital Mode - RS232 or RS485 Low = RS485 Open circuit = RS232				
Enable - Active low enable, input impedance. Designed to be operated by TTL, CMOS logic or open collector transistor or software command.	10			kΩ
Voltage control resolution		16		Bit
Monitor resolution		16		Bit

Unit	Voltage Control Resolution
MPD1P10/24	20 mV/Bit
MPD2.5P10/24	50 mV/Bit
MPD5P10/24	100 mV/Bit
MPD10P10/24	200 mV/Bit
MPD15P10/24	300 mV/Bit
MPD20P10/24	400 mV/Bit
MPD30P10/24	600 mV/Bit

The following sections describe the circuits used for RS232 and RS485 to make digital (serial) connection the MPD HV units; refer to 9.2.1 for pin out details.

A Graphical User Interface (GUI) can be provided for customer testing and development work, for more information the GUI refer to Appendix B – Graphical User Interface (GUI).

10.5.1 RS232 Connection

The unit has RS232 communication facilities available via pins 14 and 15 of the 15 way 'D' connector. For the protocol used, refer to protocol document 48113-21, which can be provided on request.

The unit may be controlled digitally as follows: -

24V Power input on Pin 2.

Power Common on Pin 1.

Select Mode RS232 on Pin 13 by leaving open circuit


RS232 signal ground on pin 11

RS232 transmit on Pin 14 – connect to Rx pin on PC

RS232 receive on Pin 15 – connect to Tx pin on PC

Connect Enable Pin 12 to ground to enable HV output. This is independent of the firmware/communications interface and can be used to shut down the HV output.

Connect Pin 5 to Pin 10.

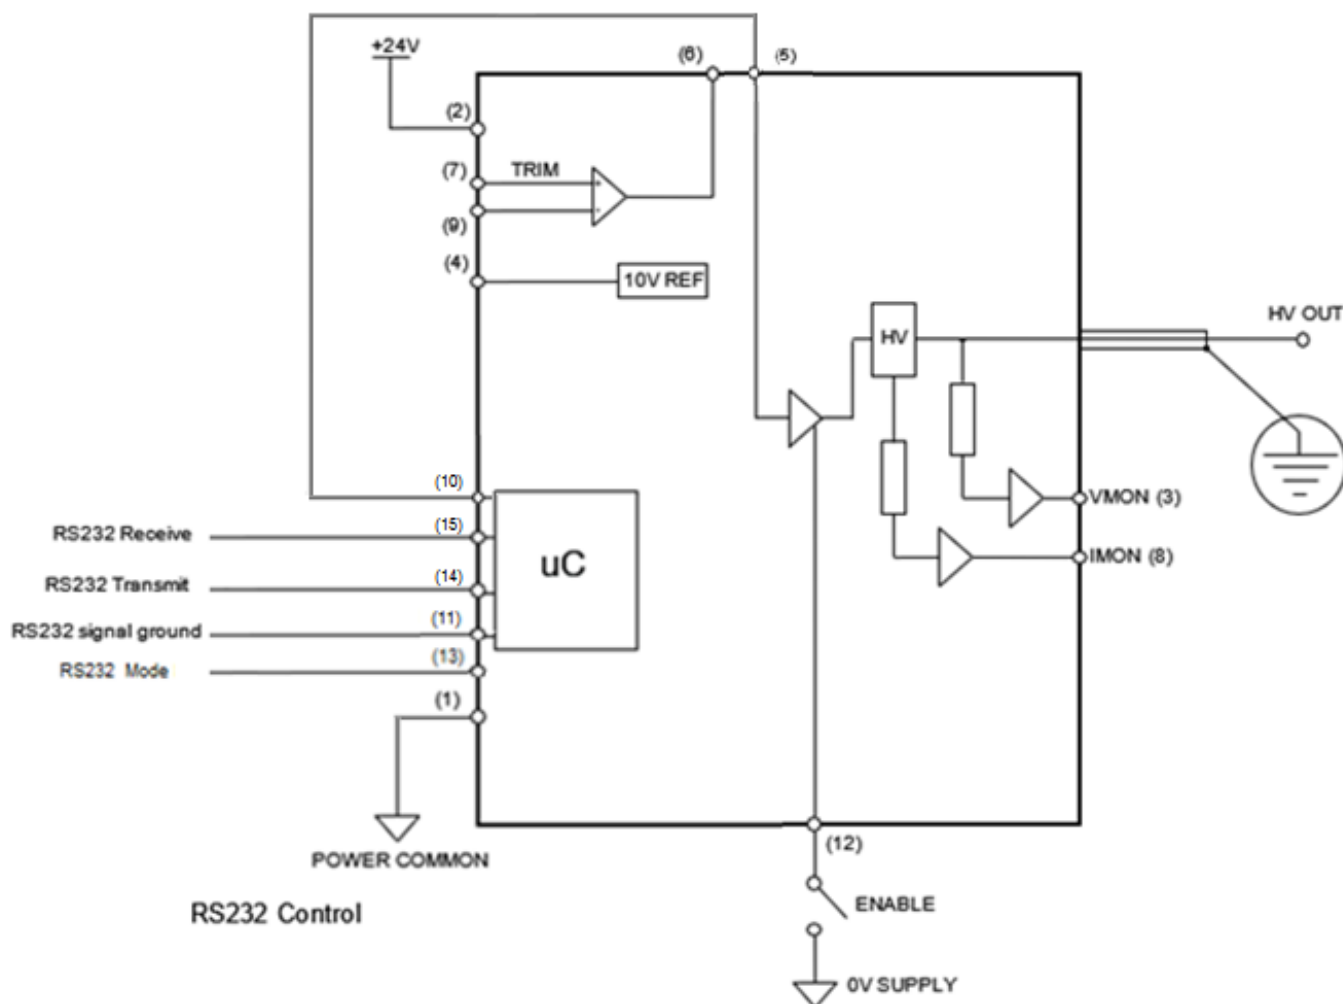

10.5.2 RS485 Connection

The unit has RS485 communication facilities available via pins 14 and 15 of the 15 way 'D' connector. For the protocol used, refer to protocol document 48113-21, which can be provided on request.

The unit may be controlled digitally as follows: -

24V Power input on Pin 2.

Ground on Pin 1.

Power common to Pin 1.

Select Mode RS485 – connect Pin 11 to 13.

RS485 signal ground on Pin 11.


RS485 Z (inverting) on Pin 14 – connect to RS485 inverting pin, Z or B on PC

RS485 Y (non-inverting) on Pin 15 – connect to RS485 non-inverting pin, Y or A on PC.

A 120R termination resistor should be fitted to the last MPD particularly if long cabling is used.


Connect Enable Pin 12 to ground to enable HV output. This is independent of the firmware/communications interface and can be used to shut-down the HV output.

Connect Pin 5 to 10

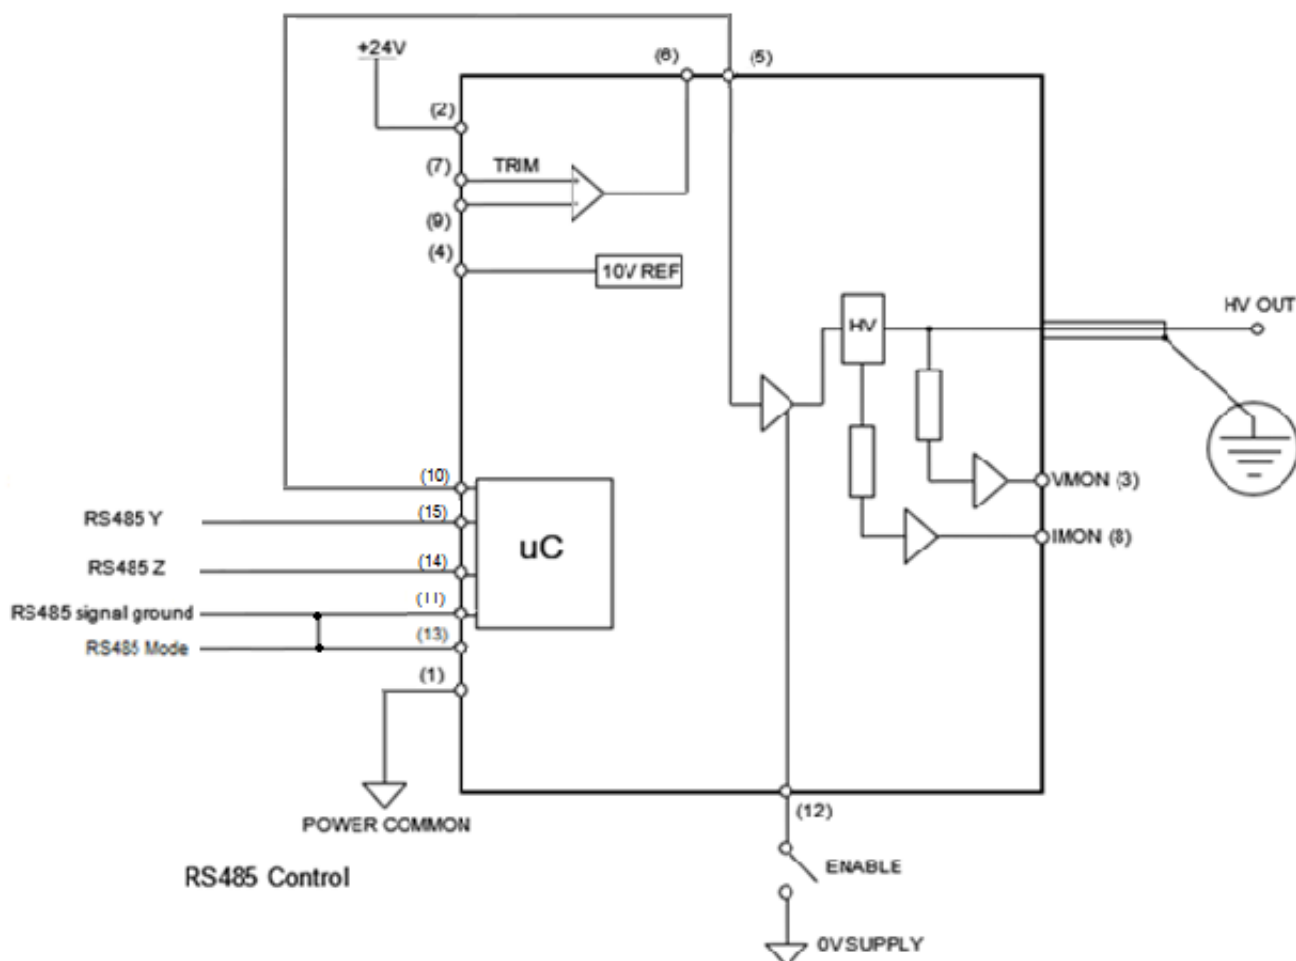


Appendix A - Mechanical layout


Units rated from 1kV to 10kV

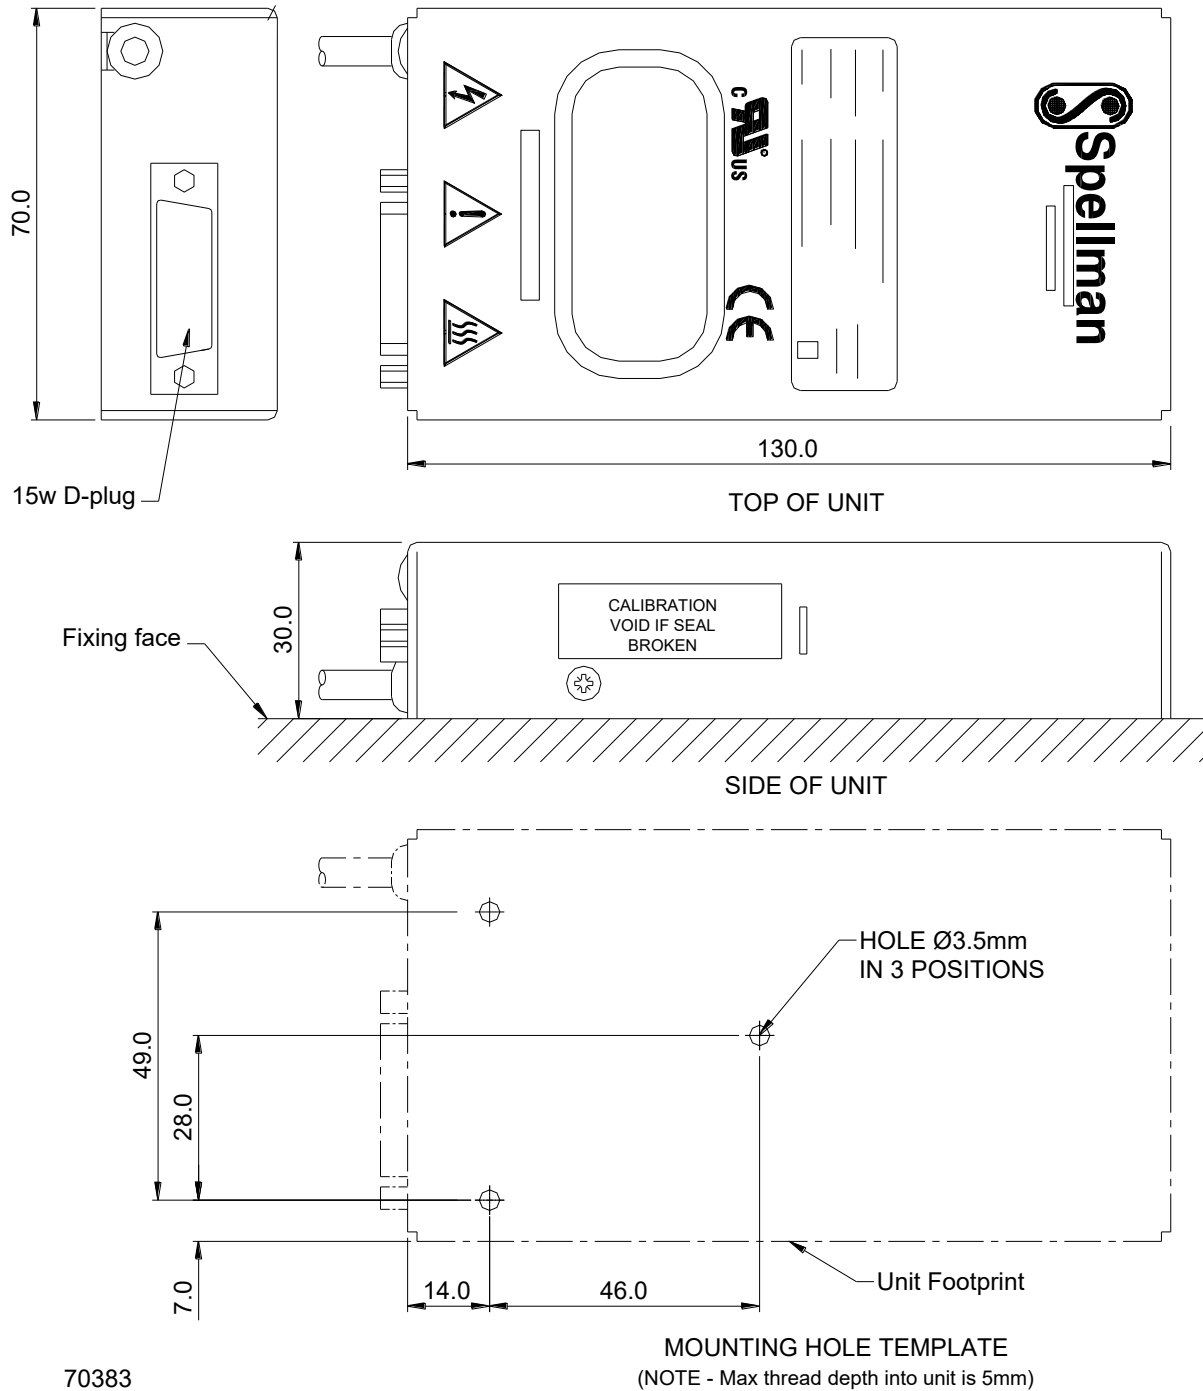

Units rated at 15kV and 20kV

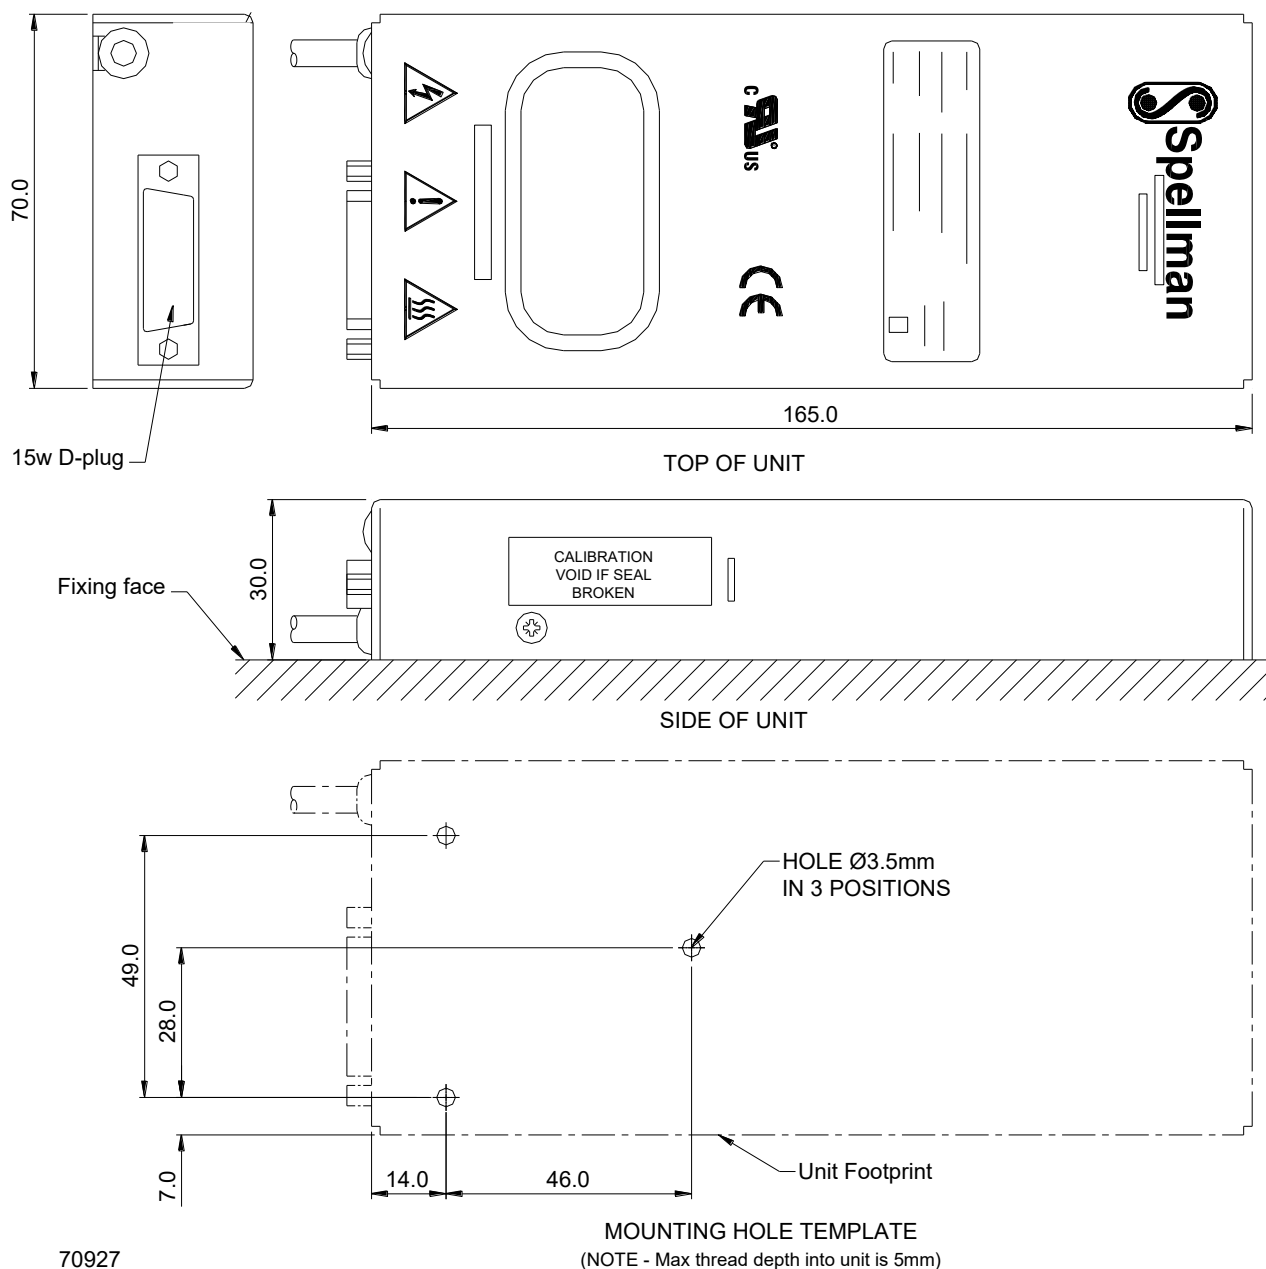

Units rated at 30 kV

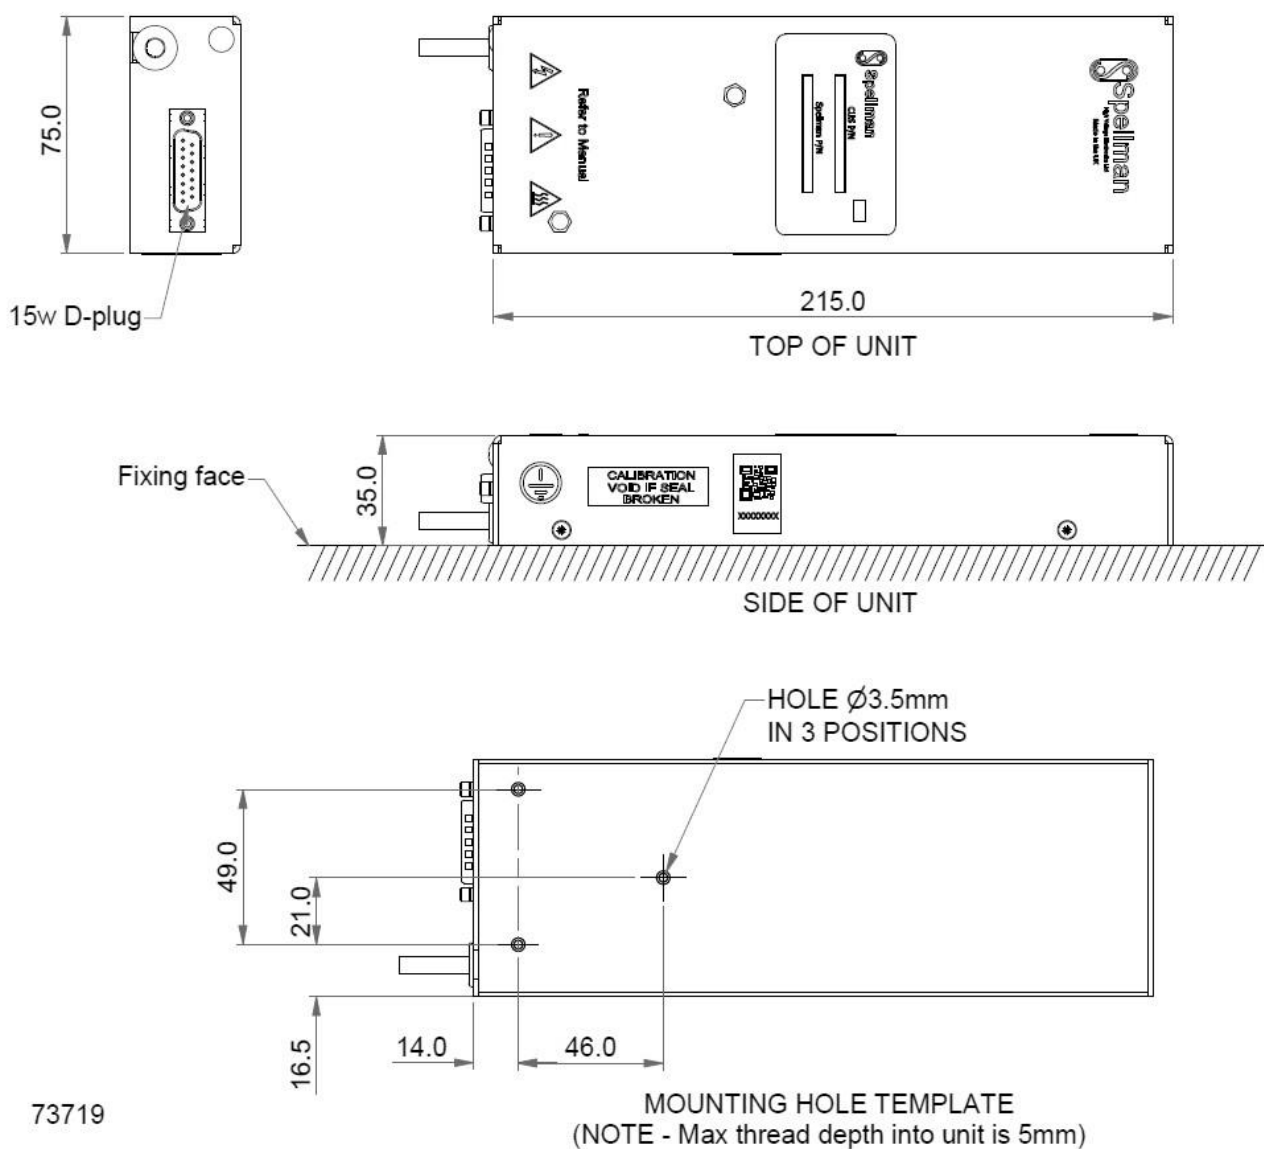

Appendix B – Graphical User Interface (GUI)

During development and testing Spellman HV Ltd. use an in-house developed Graphical User Interface (GUI) to control and manage the MPD units. This GUI is not intended for customer use and so is an un-supported product. It is provided to customers to help them with initial product evaluation. Longer term it is normal for customers to use their own software to control the product.

The communications protocol for the MPD unit is specified in the Spellman document: 48113-21 Serial Communications Protocol.

GUI Requirements and limitations

The GUI is written to run on Microsoft Windows 10 and Windows 11 and uses Microsoft .Net Framework Version 4.

The GUI does not support internationalisation. All GUI text is in English.

GUI Installation instructions

To install the GUI, the user will need the GUI installer application. This is comprised of two files.

- 'Customer 48113-GUIvxryy.exe'
- 'Customer 48113-GUIxryy.msi'

Where:

x Major Version Number
yy Minor Version Number

If you do not have the files, please contact your local Spellman Sales Office quoting '48113-GUI'. They will arrange for the installer files to be sent to you.


First time installation

To install the GUI for the first time, follow the procedure below.

Copy the files above to a convenient location on your computer.


Double click the 'Customer 48113-GUIVxry.exe' file. The GUI installer will start to run.

Click the 'Next' button. The End User License Agreement (EULA) will be displayed.

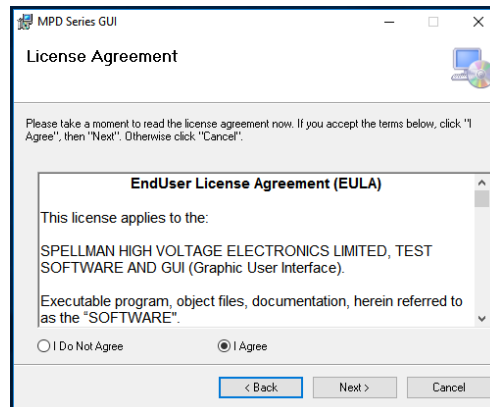


Read the EULA through and if you agree to the terms, click the 'I Agree' button and then click the 'Next' button. The installer is now ready to install the GUI.


Click the 'Next' button once more. Installation will begin.

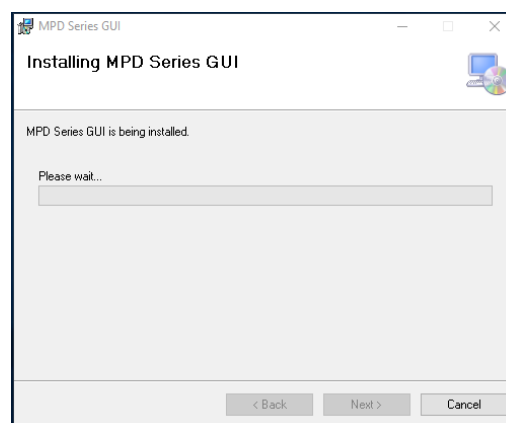

Once installation is complete, the following will be displayed.

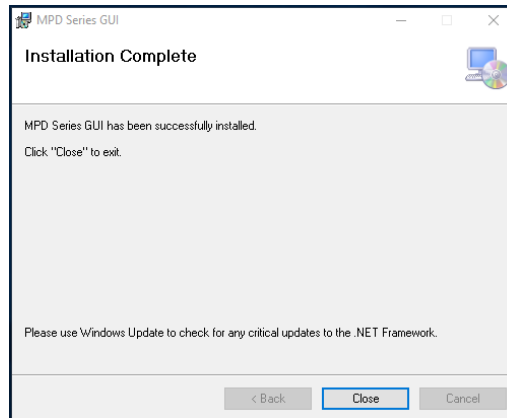

Click the 'Close' button. The GUI has been installed in the 'C:\Projects\MPD_Series GUI' folder on your computer and a shortcut placed on your computer's desktop.

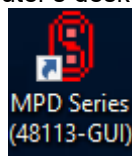

Installing GUI Updates


To install newer versions of the GUI, the old one must first be uninstalled. This can be done in two ways. See the following paragraphs.

Note: Once the previous version of the GUI has been removed, re-install the updated one using the procedure in paragraph 4.2.3.1.

Uninstall using the original GUI installation application.

Execute the installation application that was used to install the application and follow the procedure below.

Double-click the 'Customer 48113-GUI\vxrxy.exe' file. The GUI installer will start to run.

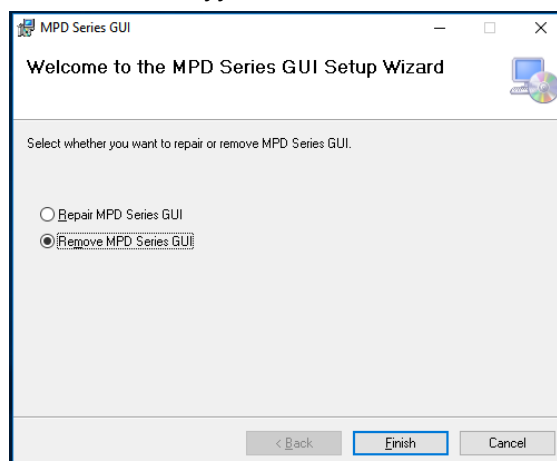

Click the 'Remove MPD Series GUI' option and click the 'Finish' button.

The application will be removed.

When complete, a corresponding dialog will be displayed. Click the 'Close' button.


Uninstall using the Windows 10 'Apps & Features' tool.

To uninstall the application using the 'Apps & Features' tool follow the procedure below.


Click the Windows 10 task bar search icon.



The Search text box will be displayed.

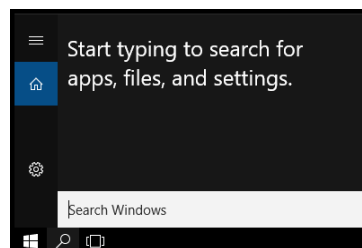


Start to enter the text 'apps'. The search results will display the item below.



Click this item. The 'Settings' GUI will be displayed showing the 'Apps & Features' page. Scroll down the list and find the 'MPD Series GUI'.

	Microsoft Visual C++ 2012 Redistributable (...)	17.4 MB
	Microsoft Corporation	16/09/2020
	Microsoft Visual C++ 2013 Redistributable (...)	17.2 MB
	Microsoft Corporation	16/09/2020
	Microsoft Visual C++ 2013 Redistributable (...)	17.2 MB
	Microsoft Corporation	16/09/2020
	Microsoft Visual C++ 2017 Redistributable (...)	23.7 MB
	Microsoft Corporation	16/09/2020
	Microsoft Visual C++ 2017 Redistributable (...)	20.2 MB
	Microsoft Corporation	16/09/2020
	MPD Series GUI	188 KB
	Spellman HV UK	16/09/2020
		Modify Uninstall
	MXR Series GUI	208 KB
	Spellman HV UK	18/08/2020
	PicoLog 6 6.1.14	401 MB
	Pico Technology	16/09/2020
	PicoLog 6 6.1.8	326 MB
	Pico Technology	16/09/2020

Click on the item highlighted in the image above. The option to 'Uninstall' will be displayed.
Click the 'Uninstall' option. Another small dialog will be displayed.

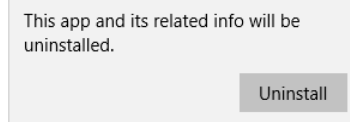


Click 'Uninstall' once more and the application will be removed.

GUI Configuration and Operation

During Installation, a shortcut to the GUI will have been placed on the Windows 10 Desktop.


Double-click the shortcut icon to launch the GUI.

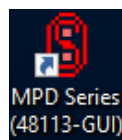


GUI Configuration

Before attempting to communicate with the MPD, the GUI must first be told which serial comms port to use. To do this follow the procedure below.

Click the 'Setup' menu option on the GUI menu bar. The dialog box shown below will be displayed.

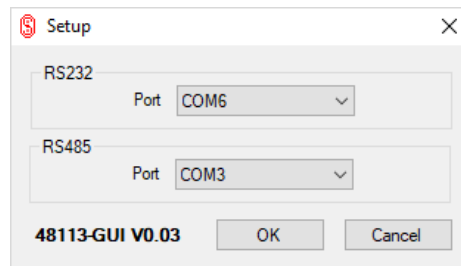

Select the serial port to use from the 'Port' combo box. Click the 'V' arrow and a list of all available comms ports will be displayed.



Click the Serial Port you have connected to the unit.
Click the 'OK' button and the 'Setup' dialog will close.

Opening comms with the MPD unit

With the GUI configured correctly and connected to an RS232/485 port it will start communicating directly with the MPD: the GUI dialog's controls/data fields will be populated with data and status from the MPD.

As can be seen the GUI contains many controls that are grouped into areas. The following paragraphs briefly discuss each of these groups of controls.

Monitoring the MPD Unit

Various groups of controls are provided to monitor the MPD outputs and status.

Output Monitors

The controls shown below display the current operating status of the HV output voltage and current monitors, along with the 24V rail and temperature. This shows the raw (bits) data and scaled product.

Monitors			
	Scaled		Raw
VMon	23.8	V	117
IMon	2.4	μA	149
VProg	24.8	V	123
Temperature	32.9	°C	57347
24V rail	23.9	V	47215
Log ☐	View	Delete	

System Status

The 'Status' group of flags provide the user with feedback regarding system fault, regulation or current trip conditions.

Key: Flag colours.

	OK/Good
	Fault/Trip

Status

☐ Enabled
☒ Fault
☒ O/P Regulation
☒ O/P Over I
☒ Over Temp
☒ Supply Voltage
☐ HW Enabled
☐ SW Enabled

0x00

Clear Faults

The 'HW Enabled' and 'SW Enabled' flags are described in following section.

Programming Output Demand

Programming the MPD output is achieved using the 'Voltage Setpoint' and 'Current Limit' controls.

Voltage Setpoint
V

Current Limit
μA

Voltage Applied

To change the programmed demand of the output, the unit must first be enabled. Once enabled, enter the desired demand into 'Voltage Setpoint' or 'Current limit' numeric 'Up/Down control' and press the 'Enter' key.


Controlling multiple MPD units (RS-485 mode only)

In order to control multiple units, they firstly need to be assigned unique addresses; this is done one unit at a time.


Connect serial comms to and power up the unit.

Run the MPD GUI (48113-GUI).

Click the 'Single Unit' tab. The GUI will look similar to the image below.

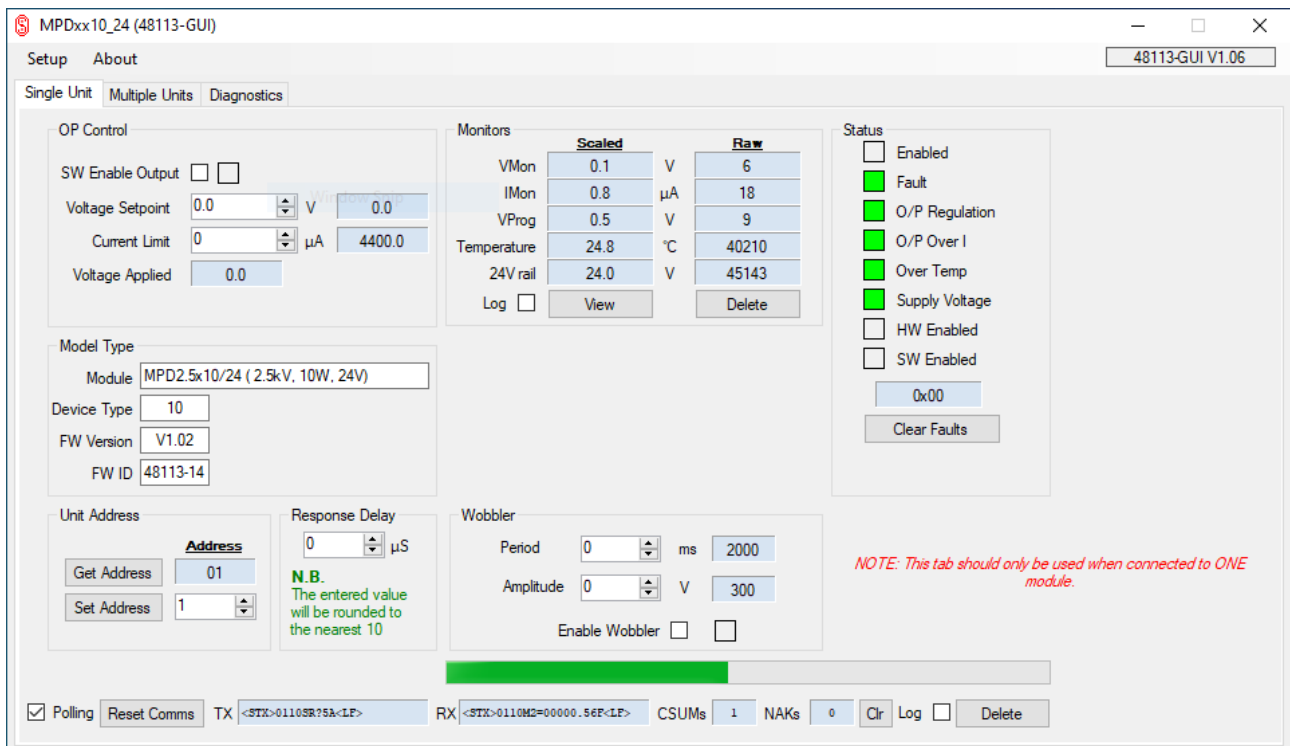

Under the Address field, enter the address the unit is to be set to and click the 'Set Address' button. Enter the address the unit is to be set to and click the 'Set Address' button.

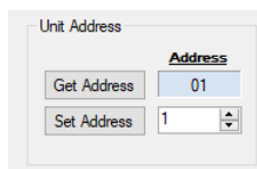

Once all units have been assigned a unique address, use the Multiple Units tab to control them.

